

**Recommended Printer Settings for Desktop-Printer**
**C xx04/ C xx95 and Lxx94**

<b>Manufacturer:</b>	<b>Model:</b>	<b>Paper Type:</b>	<b>Print Quality:</b>	<b>Alternatives:</b>	
Hewlett Packard	Deskjet 700 series	hp premium photo paper hp photo paper	Best	Photo REt	
	Deskjet 800 series				
	Deskjet 900 series				
	Deskjet 3000 series	HP Premium Plus Photo Paper			
	Deskjet 6000 series				
	Photosmart series	HP Productivity Photo Gloss			
	HP Designjet 4000				
	HP Designjet Z 3100 Vivera				HP Advanced Photo Paper Glossy
	HP Designjet 5500 UV				HP Productivity Photo Gloss
Photosmart Pro B- & Z-Series	HP Advanced Photo Paper Glossy				

<b>Manufacturer:</b>	<b>Model:</b>	<b>Paper Type:</b>	<b>Print Quality:</b>	<b>Alternatives:</b>
Epson	Stylus Photo R2400	Premium Glossy Photo Paper	Best Photo	Photo Enhance
	Stylus Color series		Best Photo	
	Stylus Photo series			
	Stylus Photo R200/ R300			
	Stylus Photo R800			
	Epson Stylus Pro 9600		Quality	
	Stylus C64/66/84/86	Photo Papers		

<b>Manufacturer:</b>	<b>Model:</b>	<b>Paper Type:</b>	<b>Print Quality:</b>	<b>Alternatives:</b>
Canon	S Series	Glossy Photo Paper	High	Auto
	IP Series			
	Pixma Series			
	W6400 Pigm.			

<b>Manufacturer:</b>	<b>Model:</b>	<b>Paper Type:</b>	<b>Print Quality:</b>	<b>Alternatives:</b>
Lexmark	Z Series	Glossy/ Photo Paper	Maximum/ Photo	Automatic/ Natural Color
	P Series			